

Straighten and connect all bungeed poles.



Organize all remaining poles by their numerical order & connect accordingly. Insert any remaining reinforcement poles.



Lift the frame and connect the footplates onto the frame.



Put on your fabric gloves and slide the printed graphic over the frame.

4



Zip up to close the cover.

## Side Shelf



Start by loosening the latch on the bottom side of the shelf.

 


Connect shelf poles to the footplate. Then insert the shelf top into the pole and close the latch.

## Case-2-Counter




Snap the TV Mount into place between the tension walls/banners. Then, slide the X piece out.



TV Mount \*Max TV weight: 25 lbs. Fits a 19" - 24" TV.

 Screw X piece onto the back of your TV. Then secure the TV into the mount by sliding it into place until it clicks.



Insert all four poles into the bottom case lid.



Connect the crossbars to the four poles by snapping them together.



Then, insert the top case into the four poles.



Pull the printed graphic over the frame. Then, buckle the two straps on the top & bottom.



Place top lid to cover the storage area and you're all set.


## Light



Attach metal clamp on top of wall/banner and tighten. Then, slide light onto clamp.



Ensure the light is switched off before attaching cord and plugging into outlet.

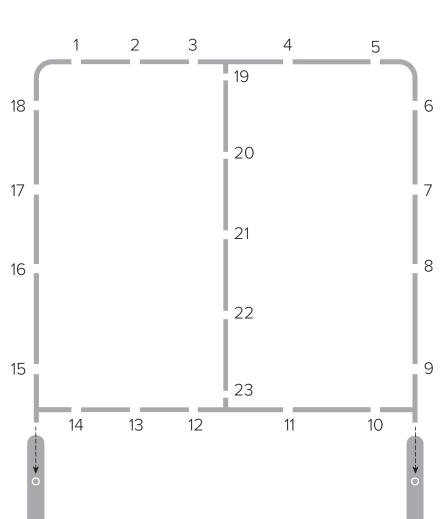

Wall



