

Straighten and connect all bungeed poles.



Organize all remaining poles by their numerical order & connect accordingly. **Insert any remaining reinforcement poles.**



Lift the frame and connect the footplates onto the frame



Put on your fabric gloves and slide the printed graphic over the frame.



Zip up to close the cover

TV Mount + Shelf Set Up

Note: Put on Printed Fabric before placing TV Mount + Shelf



After connecting the Banner frame, put on gloves and pull printed frabric over the frame.



After the fabric is on, take the TV Mount + Shelf and place it through the two cutout holes as seen in photo.



Connect the TV Mount/Shelf frame to the underside frame as seen in photo.



Place the TV/Shelf frame through the two holes & connect the pieces.



Locate the hole in the fabric to screw in the TV Mount/Shelf to the frame.



Connect the TV bracket after placing printed graphic and frame together. Connect the TV bracket using the top right and 2nd left screw.

Case-2-Counter



Insert all four poles into the bottom case lid.



Connect the crossbars to the four poles by snapping them together.



Then, insert the top case into the four poles.



Pull the printed graphic over the frame. Then, buckle the two straps on the top & bottom.

 


Place top lid to cover the storage area and you're all set.

Light




Attach metal clamp on top of wall/banner and tighten. Then, slide light onto clamp.



Ensure the light is switched off before attaching cord and plugging into outlet.

Quick-N-Fit Booth 1217

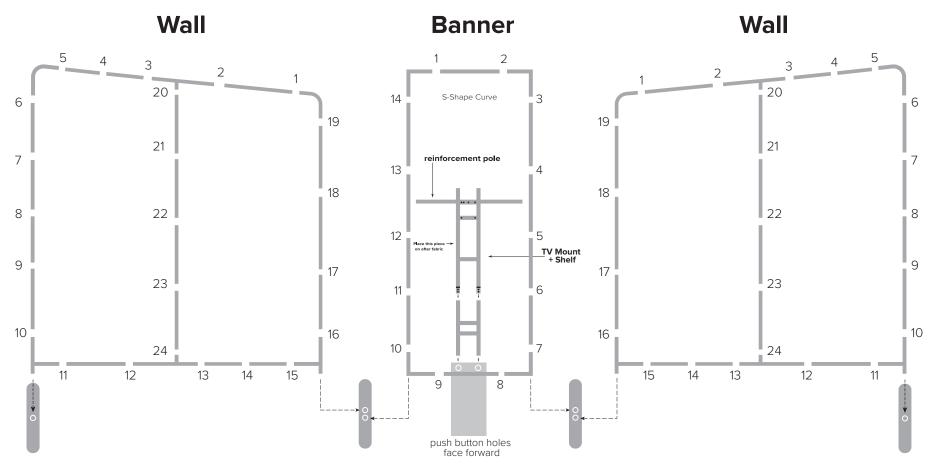

Includes:

- 2 Walls
- 1 Banner
- 2 Case-2-Counters
- 1TV Mount
- 2 Lights

*TV & Flooring Not Included



