


General Set Up Instructions **Set up one frame at a time to avoid mixing pieces*

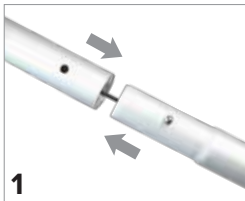

1
Straighten and connect all bungeed poles.



2
Organize all remaining poles by their numerical order & connect accordingly. **Insert any remaining reinforcement poles.**



3
Lift the frame and connect the footplates onto the frame.



4
Put on your fabric gloves and slide the printed graphic over the frame.



5
Zip up to close the cover.

Side Shelf



1
Start by loosening the latch on the bottom side of the shelf.




2
Connect shelf poles to the footplate. Then insert the shelf top into the pole and close the latch.

TV Mount **Max TV weight: 25 lbs. Fits a 19" - 24" TV.*



1
Snap the TV Mount into place between the tension walls/banners. Then, slide the X piece out.

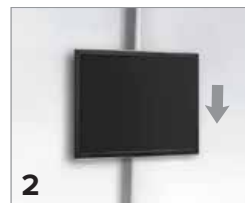


2
Screw X piece onto the back of your TV. Then secure the TV into the mount by sliding it into place until it clicks.

Case-2-Counter



1
Insert all four poles into the bottom case lid.

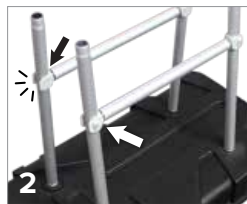

2
Connect the crossbars to the four poles by snapping them together.



3
Then, insert the top case into the four poles.



4
Pull the printed graphic over the frame. Then, buckle the two straps on the top & bottom.



5
Place top lid to cover the storage area and you're all set.

Light




1
Attach metal clamp on top of wall/banner and tighten. Then, slide light onto clamp.




2
Ensure the light is switched off before attaching cord and plugging into outlet.

Quick-N-Fit Booth 1105

Wall

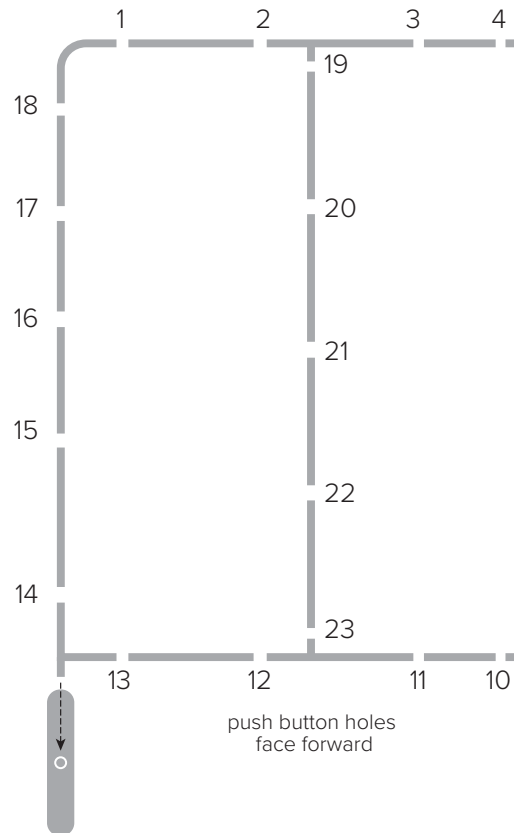

Banner

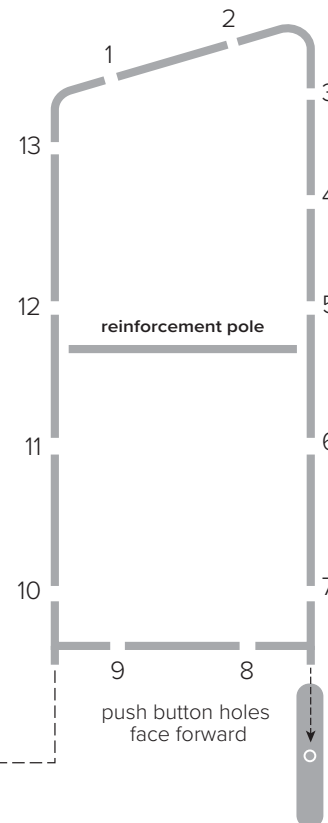

Side Shelf

Includes:

- 1 Wall
- 1 Banner
- 1 Case-2-Counter
- 1 Side Shelf
- 1 TV Mount
- 1 Light

**TV & Flooring Not Included*

