



# Wall + Banner Set Up

*\*Set up one frame at a time to avoid mixing pieces*

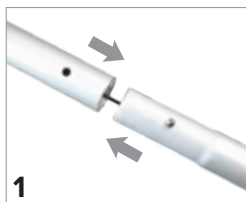

**1**  
Straighten and connect all bungeed poles.

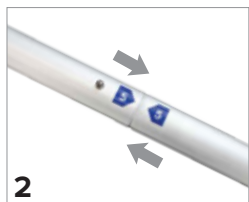

**2**  
Organize all remaining poles by their numerical order & connect accordingly. **Insert any remaining reinforcement poles.**



**3**  
Lift the frame and connect the footplates onto the frame.




**4**  
Put on your fabric gloves and slide the printed graphic over the frame.



**5**  
Zip up to close the cover.

# TV Mount + Shelf Set Up


**Note: Put on Printed Fabric before placing TV Mount + Shelf**

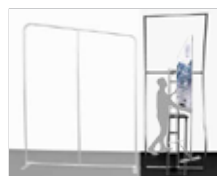

After connecting the Banner frame, put on gloves and pull printed fabric over the frame.



After the fabric is on, take the TV Mount + Shelf and place it through the two cutout holes as seen in photo.

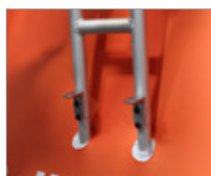

Connect the TV Mount/Shelf frame to the underside frame, as seen in photo.



Place the TV/Shelf frame through the two holes & connect the pieces.



Locate the hole in the fabric to screw in the TV Mount/Shelf to the frame.




Connect the TV bracket after placing printed graphic and frame together. Connect the TV bracket using the top right and 2nd left screw.

# Case-2-Counter



**1**  
Insert all four poles into the bottom case lid.

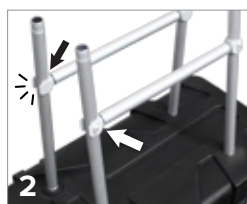

**2**  
Connect the crossbars to the four poles by snapping them together.



**3**  
Then, insert the top case into the four poles.



**4**  
Pull the printed graphic over the frame. Then, buckle the two straps on the top & bottom.



**5**  
Place top lid to cover the storage area and you're all set.

# Light




**1**  
Attach metal clamp on top of wall/banner and tighten. Then, slide light onto clamp.



**2**  
Ensure the light is switched off before attaching cord and plugging into outlet.

# Quick-N-Fit Booth 1106

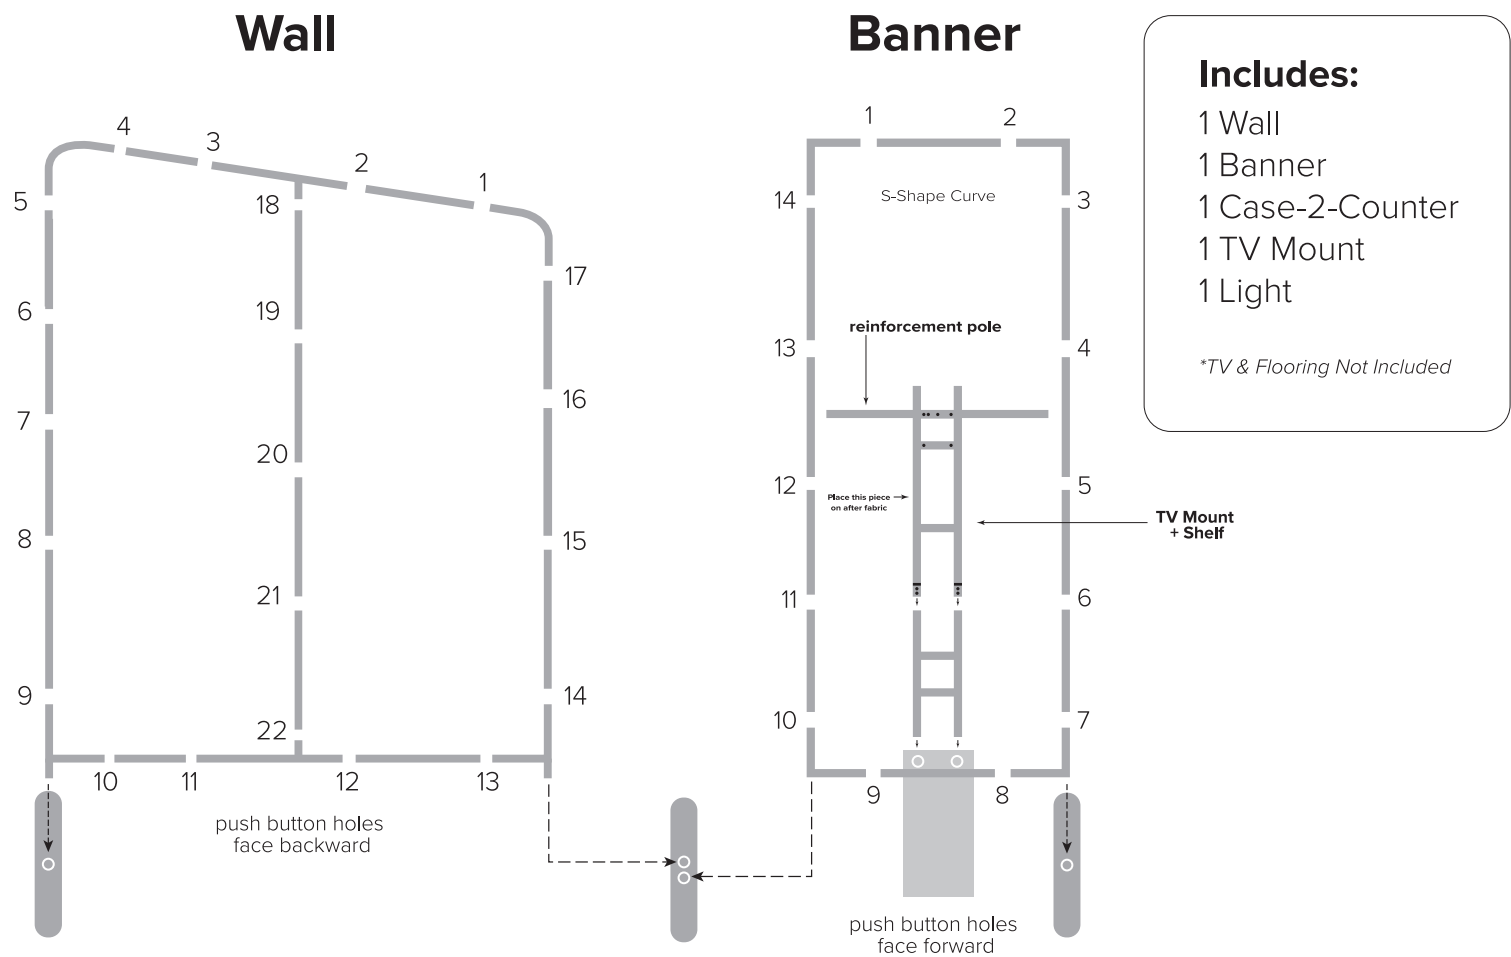

Reference Photos

