


SETUP

STEP 1. Remove the screws from the shipping tube end caps on each side if applicable.

STEP 2. Remove flooring from tube.

STEP 3. If using padding, lay the padding down first. If you prefer not to use padding, proceed to **Step 5**.

STEP 4. If you want to have a slight transition edge, feather the outside perimeter on the padding. Cut back about 2-3 inches, so the flooring can be taped to the floor instead of the padding.

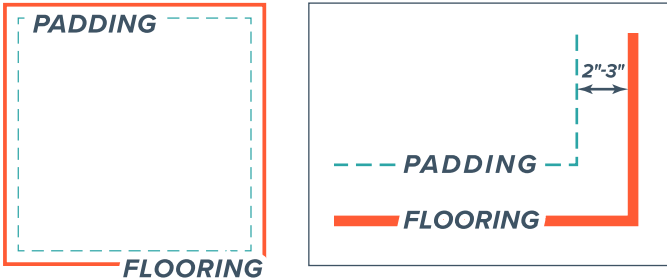


STEP 5. Roll out flooring.

If there are multiple strips, each piece will be numbered on the back. The strips will lay down in numerical order, with all numbers on the same side. Please refer to enclosed diagram.

Note: To improve the performance of the flooring, tape the perimeter of the flooring backing with clear tape or duct tape (not provided) prior to applying the provided double-sided tape. This will diminish the risk of damaging the flooring backing.


STEP 6. Use double-sided tape (provided) around the perimeter of the flooring to secure it to the substrate.

Note: Make sure the patterns match up before securing the flooring to the substrate.

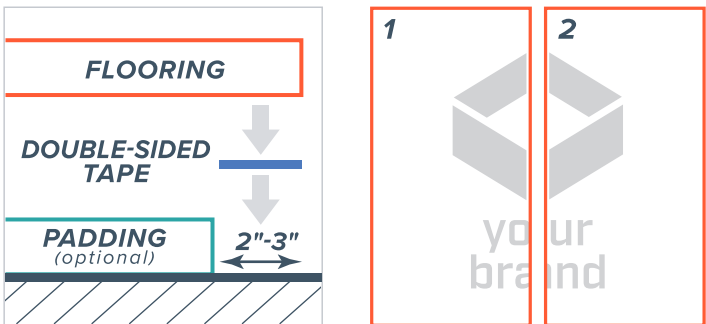

DISMANTLE

Note: Be careful when pulling up the floor. If not done correctly, the floor may tear or stretch.

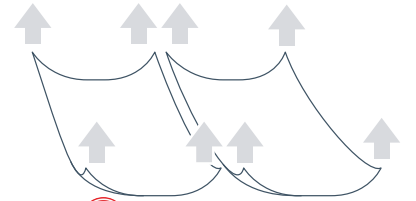

1. Pull one corner up and then gently pull up each side. **! PULL UP GENTLY**

2. Roll the pattern side out. Inform installer that the floor should be removed from the ground slowly to minimize potential damage.

3. Shrink-wrap the middle of the flooring to hold the roll while putting it back into the container.

4. If using the cardboard shipping container, be careful when screwing the end caps back into the ends. If the screw breaks thru or misses the end cap, the flooring may be marred.

5. Tape an "X" across the end caps. This will help keep the end cap in place if it is knock loose from the shipping container.

CLEANING

Cleaning can be done with a Swiffer or Windex Wipes.